

Quick start guide Vodafone Smart II

vodafone

Table of contents

1	Your phone	1
2	Text input	11
3	Phone calls	13
4	Contacts	14
5	Messaging	15
6	Email	16
7	Getting connected	17
8	GPS	20
9	Data backup	20
10	Factory data reset	21
11	Applications	22
12	Making the most of your phone	22
13	Product Safety Information	23
14	Telephone warranty	32

1 Your phone

1.1 Keys and connectors



1	Headset connector	8	Volume down
2	Power key	9	Back key
3	Loudspeaker	10	Search key
4	Menu key	11	Loudspeaker
5	Home key	12	Flash
6	Micro-USB connector	13	Camera
7	Volume up	14	Camera key

Power kev

 Short press: Wake the phone when in sleep mode Lock the screen End a call when active.

· Long press: Turn the phone on

Choose Silent mode, Airplane mode or

Power off

Home kev

- . Short press: Return to the Home screen or back to the central Home screen if it is extended.
 - Long press: Enter the recently used applications list.



- On the Home screen, press to quickly access Settings menu or Notification panel; to launch quick search; to customise your Home screen by adding applications or changing wallpaper.
- · On other screens, press to view options list.



Go back to the previous menu or screen.



Search key

• Open Search bar for searching within an application, the phone or web.

Volume Keys

- · Adjust the volume during a call, or when playing music or videos
- Adjust the ring tone volume in general mode.



Camera key

- · Long press: Start up the camera.
- · Short press: take a photo or start/stop recording a video when on camera or video preview screen.

1.2 Getting started

1.2.1 Set up

Removing or installing the back cover



Inserting or removing the SIM card (1)

You must insert your SIM card to make phone calls. Please power off your phone and remove the battery before inserting or removing the SIM card.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card. press and slide it out.

Installing and removing the microSD card



To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, fold down the microSD holder and slide it in the opposite direction to lock it.


⁽¹⁾ Your SIM card must be 3V or 1.8V compatible. If your SIM card does not work, please contact Vodafone, as it may be an older 5V SIM.

Installing or removing the battery



- To install, insert and click the battery into place, then close the phone cover.
- To remove the battery, first power the phone off. Then unclip the cover and remove the battery.

Charging the battery

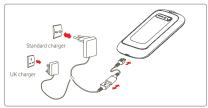

Connect the battery charger to your phone and mains socket respectively.

You are advised to fully charge the battery (). Charging status is indicated by a lightning icon and an increasing level of green in the battery symbol () on the top icon bar.



To reduce power consumption and energy waste, when the battery is fully charged: disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

1.2.2 Turn on your phone

Hold down the $\bf Power$ key until the phone powers on. It will take some seconds before the screen lights up.

Set up your phone for the first time

The first time you power on the phone, you are asked to touch the Android logo to begin. And then you will be asked if you want to set up some options: Language, Keyboard, Mobile Data connection, Application Sync, Setup your Google Account, Date & time etc.



You can always go to this initial setup again by touching Applications tap/Setup Wizard.

If you don't have a SIM card installed, you can still connect to a Wi-Fi network from the Home screen, sign in to your Google account, and use some features.

1.2.3 Power off your phone

Hold down the **Power key** from the Home screen until the **Phone options** appear, select **Power off**.

1.3 Home screen(1)

You can bring all the things you use most frequently (applications, shortcuts, folders and widgets) to your Home screen for quick access. Press the **Home** key to switch to Home screen.



Status/Notification indicators

- Touch & drag down to open the notification panel.
- Applications tab
- Touch to open main menu.
 Long press to display thumbnails of all your Home screens.
- Touch an icon to open an application, folder, etc.
- Touch to access Browser
- · Touch to access the dial screen.
- Touch to access Call log if you have missed call(s).

The Home screen also includes other screens on either side of it to allow for more space for adding applications, shortcuts, etc.

Touch the small dots on either side of the Applications tab to move to the next screen available. Touch & hold the dots to display thumbnails of the other screens, then touch a thumbnail to open it.

⁽¹⁾ The Home screen on your phone may look different to this.

1.3.1 Using the touchscreen



To access an application, touch it with your finger.

Touch and Hold

To enter the available options for an item, touch and hold the item. For example: select a contact in Contacts, touch and hold this contact, and an option list will then appear on screen.

Drag A

Place your finger on the touchscreen to drag an object to another location.



Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Flick

Similar to swiping, but flicking makes it move quicker.

Pinch/Spread



Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate



Automatically change the screen orientation from portrait to landscape by turning the phone sideways to have a better screen view.

1.3.2 Status bar

From status bar, you can view both phone status (to the right side) and notification information (to the left side). When the status bar is full, "+" icon will appear, touch to display hidden icons.

Status icons

Ğ	GPRS connected	¢	GPS is on
Ġ	GPRS in use	•	Receiving location data from GPS
Ë	EDGE connected	G	Speakerphone is on
Ë	EDGE in use	Bill	Roaming
1 5	3G connected	ĭıl	No signal
åĠ	3G in use	D	No SIM card installed
Ħ	HSPA (3G+) connected	Ø,	Vibrate mode
Ħ	HSPA (3G+) in use	×	Ringer is silenced
څ	Connected to a Wi-Fi network	Ψ×	Phone microphone is mute
*	Bluetooth is on		Battery is very low
*	Connected to a Bluetooth device		Battery is low
加	Airplane mode		Battery is partially drained
(i)	Alarm is set		Battery is full
ш	Signal strength	ŝ	Battery is charging
①	Car mode	n	Headset connected

Notification icons

New Gmail message	a	More notifications are hidden
New text or multimedia message	6	Call in progress (green)
Problem with text or multimedia message delivery	C	Call in progress using Bluetooth headset (blue)
New Google Talk message	~	Missed call
New voicemail	G	Call on hold
Upcoming event	C	Call forwarding is on
Data is synchronising	<u>↑</u>	Uploading data
Problem with sign-in or synchronisation	<u>+</u>	Downloading data
microSD card is full	<u>+</u>	Download finished
No microSD card installed	*	An open Wi-Fi network is available
Connected to VPN	ψ	Phone is connected via USB cable
Disconnected from VPN	È	Radio is on
Song is playing	ಹ	System update available
USB tethering is on	<u></u>	Portable Wi-Fi hotspot is on
Both USB tethering and portable hotspot are on		
	New text or multimedia message Problem with text or multimedia message delivery New Google Talk message New voicemail Upcoming event Data is synchronising Problem with sign-in or synchronisation microSD card is full No microSD card installed Connected to VPN Disconnected from VPN Song is playing USB tethering is on Both USB tethering and	New text or multimedia message Problem with text or multimedia message cellivery New Google Talk message cellivery New voicemail Upcoming event Data is synchronising Problem with sign-in or synchronisation microSD card is full No microSD card installed Connected to VPN Disconnected from VPN Song is playing USB tethering is on Both USB tethering and

Notification panel

To open the notification panel, touch & drag down from the Status bar or press the **Menu** key and touch **Notifications**. Touch & drag up to close it. From Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.



Touch clear to clear all event–based notifications (other ongoing notifications will remain).

1.3.3 Search bar

The phone provides a Search function which can be used to find information within applications, the phone or the web.

1.3.4 Lock/Unlock your screen

To protect your phone and privacy, you can lock the phone screen by creating a variety of patterns, PIN or password etc.

1.3.5 Personalise your home screen

Add

You can add shortcuts, widgets or folders to the Home screen by touching & holding an empty area, or pressing the Menu key, and touching Add.

Reposition

Touch and hold the item to be repositioned to activate the Move mode, then drag it to the place you want and release it. Hold the icon on the left or right edge of the screen to drag the item to another Home screen page.

Remove

Touch and hold the item to be removed to activate the Move mode. Drag the item to the top of the Applications tab, which will then turn red and release.

Wallpaper customisation

To change your Home screen wallpaper, touch & hold an empty area, or press the **Menu** key, then touch **Wallpapers**.

1.3.6 Applications tab

Touch from the Home screen to enter applications list.

To return to the Home screen, press the Home key.

Open recently-used applications

To open recently-used applications, you can press and hold the **Home** key from the Home screen. Touch an icon in the window to open the related application.



1.3.7 Volume adjustment

You can set ringer, media and phone ringtone volume to your preference by pressing the **Volume up/down** key, or by going to the **Settings/Sound** menu

1.4 Applications list

The Applications list contains all your applications, whether they were installed on the phone or added afterwards.

To access the Applications list, touch from the Home screen. To return to the Home screen, press the **Home** key.

1.4.1 Normal mode and sort mode

Applications can be managed in two modes. To switch between the two modes, press the **Menu** key from applications list screen, and touch **Switch view**.

Normal mode (default)

All applications are listed in alphabetical order.

Sort mode

All applications are sorted by category.

1.4.2 Managing Categories (1)

There are 8 categories in total: 5 categories are predefined, and you can add 3 more.

Press the **Menu** key, and select **Edit** to enter edit mode. Within edit mode you can now customise categories.

2 Text input

2.1 Using the onscreen keyboard

An onscreen keyboard will display automatically when a program requires you to text or numbers.

Onscreen keyboard settings

Press the Menu key from the Home screen, then select Settings/ Language & keyboard/Swype (or Android keyboard) to see the various keyboard settings. Scroll to select the keyboard style you want to change.

⁽¹⁾ For more information, please view the full user manual.

Change the onscreen keyboard orientation

Turn the phone sideways or upright to change the onscreen keyboard orientation. You can also change it in the keyboard settings (press the Menu key in the Home screen, then Settings/Display/Orientation).

2.1.1 Standard Android keyboard



2.1.2 Swype keyboard



2.2 Text editing

You can edit the text you have entered.

- Touch & hold text you have entered
- An options list pops up
- · Select the operation you need (Select all, Select text, Cut all, Copy all. etc.)

Phone calls...... 3



3.1 Making a call

To quickly open the Phone application:

- Touch from the Home screen.
- Touch Applications tab from the Home screen and select **Phone**.



Enter the number you want using the keyboard, or select a contact from Contacts, Call log or Favourites by touching the upper tabs, then touch to place the call.

The number you entered can be saved to **Contacts** by touching or pressing the Menu key and touching Add to Contacts.



Press the Menu key to add 2-sec pause or wait.

If you make a mistake, you can delete the incorrect digits by touching ⟨×□

To hang up a call, touch End or the Power key when the Settings/ Accessibility/Power button ends call is activation.

3.2 Answering or rejecting a call



When you receive an incoming call, drag the green phone icon over to the right to answer.

When you receive an incoming call, but don't want to answer, you may decline it by dragging the red phone icon over to the left. The caller is sent directly to your voicemail box to leave a message.

3.3 Call history

You can view your call history by touching from the Home screen and touching **Call log** to see the different categories of **Missed calls**, **Outgoing calls**, and **Incoming calls**.

4 Contacts......



You can view and create contacts on your phone and synchronise these with your Gmail contacts or other applications on the web or on your phone.



When using **Contacts** for the first time you will be asked to add new contacts, import contacts from SIM card or synchronise contacts from other application accounts to phone.

4.1 Adding a contact

Touch the Applications tab on the Home screen, select **Contacts**, then press the **Menu** key from contacts list screen and touch **New contact**.

4.2 Importing , exporting and sharing contacts

From the Contacts screen, press the Menu key to open contacts list option menu, touch Import/Export, then select Import from SIM card, Export to SIM card, Import from SD card or Export to SD card or Share visible contacts

To import/export a single contact from/to your SIM card, touch the contact you want to import/export, then press the **Menu** key and touch **OK** to confirm.

To import/export all contacts from/to your SIM card, mark the **Select all** check box, then touch **OK** to confirm.

You can share a single contact or contacts with others by sending the

contact's vCard to them via Bluetooth, MMS, Email, etc.

Touch a contact you want to share, press the **Menu** key and touch **Share** from contact details screen, then select the way you want to share it.

4.3 Synchronising contacts in multiple accounts

Contacts, data or other information can be synchronised from multiple accounts, depending on the applications installed on your phone.

5 Messaging.....



You can create, edit and receive SMS and MMS messages with your phone.

To start, touch the Applications tab from the Home screen, then select **Messaging**.



All messages you receive or send out can only be saved in phone memory. To view older messages stored on your SIM card, press the **Menu** key in the Messaging screen, then touch **Settings/Manage SIM card messages**.

5.1 Write a message

In the message list screen, touch **New message** to write text/multimedia messages.



Sending a text message

Enter phone number of the recipient in the **To** bar or touch **1** to add numbers from your Contacts, then touch the **Type to compose** bar to enter the text of the message. When finished, touch **Send** to send the text message.



An SMS of more than 160 characters will be charged as several SMS. Specific letters (accent) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible phones and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or Subject or email addresses added.

6 Email.....



Besides your Gmail account, you can also set up external POP3 or IMAP email accounts on your phone.

To access your email, touch the Applications tab from Home screen, then select $\mathbf{Email}.$

An email wizard will guide you through the steps to set up an email account.

- Enter the email address and password of the account you want to set up.
- Touch Next. If the account you entered is not provided by a service provider shown on the phone, you will be prompted to go to the email account settings screen to enter settings manually.
- Enter the account name and display name in outgoing emails.
- Touch Done.
- To add another email account, you can press the Menu key and touch Add account to create.

To create and send emails

- In the Inbox screen, press the Menu key, then touch Compose.
- Enter recipient(s)'s email address in To field, and if necessary, press
 the Menu key and touch Add Cc/Bcc to include a copy or a blind
 copy to the message.
- · Enter the subject and content of the message.
- Press the Menu key, touch Add attachment to send an attachment to the receiver.
- Finally, touch Send.
- If you do not want to send the mail right away, you can touch Save as draft or press the Back key to save a copy.

7 Getting connected

To connect to the Internet with this phone, you can use GPRS/EDGE/3G networks or Wi-Fi, whichever is most convenient.

7.1 Connecting to the Internet

7.1.1 GPRS/EDGE/3G

The first time you turn on your phone with SIM card inserted, it will automatically configure network service: GPRS, EDGE or 3G.

To check the network connection you are using, press the Menu key on the Home screen, then touch Settings/Wireless & networks/Mobile networks/Access Point Names or Network operators.

17

7.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- · Press the Menu key from the Home screen.
- Touch Settings/Wireless & networks.
- Mark/Unmark the Wi-Fi checkbox to turn Wi-Fi on or off
- Touch Wi-Fi settings. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you will be asked to enter a password or other credentials (you may need to ask the Wi-Fi network owner for details). When finished, touch Connect.





The Browser lets you surf the web, just like on your computer.

To quickly get onto the web from the Home screen, simply touch the Browser icon next to the Applications tab. You'll also find the **Browser** in Applications.

To go to a web page

In the Browser screen, touch the URL box at the top, enter the address of the web page, then touch \Rightarrow .

Browser options

Touch the Options key to add or visit a bookmarked page, view your web history, open more than one window, and more. To go back a page, touch the Back button.

Windows

18

You can have more than one Browser window open and switch between them. To open a new window, pinch the screen to minimise your existing window, then touch New window. While the windows are minimised you can flick between them.

7.3 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your phone's microSD card and the computer.

To connect/disconnect your phone to and from the computer

To connect your phone to the computer:

- Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notifications panel and touch USB connected.
- Touch Mount USB storage in the dialog that opens to confirm that you want to transfer files.

To disconnect:

- Unmount the microSD card on your computer.
- Open the Notifications panel and touch Turn off USB storage.
- · Touch Unmount USB storage in the dialog that opens.

To locate data you have transferred or downloaded in your microSD card:

- Touch the Applications tab from the Home screen to open the applications list.
- Touch FileManager.

All data you have downloaded are stored in **FileManager**, where you can view media files (videos, photos, music and others), rename files, install applications onto your phone, etc.

7.4 Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering) or with up to eight devices at once by turning your phone into a portable Wi-Fi hotspot.

To turn on USB tethering or Portable Wi-Fi hotspot

- $\bullet \hspace{0.4cm}$ Press the Menu key from the Home screen.
- Touch Settings/Wireless & networks/Tethering & portable hotspot.
- Mark the check box of USB tethering or Portable Wi-Fi hotspot to activate this function



The functions may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.

8 GPS

To activate your GPS (Global Positioning System):

- Press the Menu key in the Home screen
- Touch Settings/Location & security/Use GPS satellites
- · Mark the checkbox

When you open Maps, you can find your location:



Use your phone's GPS to pinpoint your location within an accuracy as close as several meters ("street level"). The process of accessing the GPS satellite and setting your phone's precise location for the first time will require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After this, GPS will only need 20-40 seconds to identify your precise location.

9 Data backup

This phone enables you to back up your phone's settings and other application data to Google Servers, using your Google Account.

If you replace your phone, the settings and data you've backed up will be restored onto the new phone the first time you sign in with your Google Account. To enable backups:

- Press the Menu key in the Home screen
- Touch Settings/Privacy/Back up my data
- Mark the checkbox

Once backup has been enabled, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you deactivate this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.

10 Factory data reset

WARNING! Doing a factory data reset will delete all of your personal data and settings stored on your phone.

To perform a factory data reset:

- · Press the Menu key from Home screen
- Touch Settings/Privacy/Factory data reset/Reset phone

Phone reset will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and applications settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your phone, there is another way to perform a factory data reset by using hardware keys. Hold down **Volume up** key and press **Power** key at same time until the screen lights up.

Applications

Your phone already comes with some built-in Google and thrid party applications.

With the built-in applications, you can

- · Communicate with friends
- · Exchange messages or emails with friends
- Track you location, view traffic situations, search for locations and get navigation information to your destination
- Download applications from Google Play Shop, and more.

For more information about these applications, please check the user manual online: www.vodafone.com/smart2.

12 Making the most of your phone

12.1 FOTA Upgrade

Using FOTA Upgrade tool you can update your phone's software.

To access Firmware Upgrade Manager, please touch Menu key, then press Settings/About phone/System updates. Touch Check for updates, and the phone will search for the latest software. If you want to update the system, please touch the button Download, after it done please touch Install to complete the upgrade. Now your phone's software will have the latest version.

Press Settings and Help, and you can set Wi-Fi Only, Auto-check interval. Reminder and Help.

If you have chosen auto-check, when the system discovers the new version, the icon K will appear in the status bar. Touch the notification to access the Firmware Upgrade Manager directly.

Product Safety Information

Pictograms and Graphic Symbols

Read the Safety Information section of this user guide on page 24

Do not use while re-fuelling

Do not use hand-held while driving

This device may produce a bright or flashing light

For body-worn operation maintain a separation of 1.5 cm

Do not dispose of in a fire



Small parts may cause a choking hazard



Avoid contact with magnetic media



This device may produce a loud sound



Avoid extreme temperatures



Keep away from pacemakers and other personal medical devices



Avoid contact with liquid, keep dry



Switch off when instructed in hospitals and medical facilities



Do not try to disassemble



Switch off when instructed in aircraft and airports



Do not rely on this device for emergency communications



Switch off in explosive environments



Only use approved accessories

Product Safety Information

RF Exposure

General Statement on RF energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international quidelines. These quidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to ensure the protection of all persons, regardless of age and health.

The quidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR. value for this device when tested at the ear was 0.952 W/kq(1). As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user quide.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

Body worn operation

Important safety information regarding radiofrequency radiation (RF)

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting exposure to radio frequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page http://www.who.int/peh-emf WHO Fact sheet 193: June 2000.

Regulatory information

The following approvals and notices apply in specific regions as noted.



+33 1 46 52 61 00 EC declaration of conformity / Déclaration de conformité CE Product / Produit HSDPA/UMTS dual band / GSM quad bands handheld station with bluetooth technology WiFi and FM radio HSDPA/UMTS bibande / GSM quadribandes avec technologie Bluetooth, Wifi et radio FM Product identification / Identification du produit : Vodafone Smart II type Alcatel V880 We / Nous TCT Mobile Europe SAS 55, avenue des Champs Pierreux 92000 Nanterre France Declare under our sole reasons/billy that the product above mentioned is conform to the applicable essential requirements of the directive 1999/5/EC and that all essential radio test suites have been carried out. Conformity assessment procedure : annex IV of the directive. I déclarons sous notre entière responsabilité que le produit ci-dessus est en conformité avec les exigences essentielles applicables de la discribe 1999/GCF at our toutes les séries d'essais radio essentielles out été effectuées. Propidure d'évaluation de conformité : annexe IV de la directive. Applied standards / Normes appliquées Item 3.1.a / protection of the health and of the safety of the user) / Article 3.1.a / protection de la santé et de la sécurité de l'utilisateur) - EN 60950-1-2008/A11-2006 - EN 62209-1 /2006 - EN 62209-2 (2010) - EN 50 380 (2005), Council recommendation 1999/519/EC (July 99) EN 60333 1/3000 Item 3.1.b (protection requirements with respect to electromagnetic compatibility) / Article 3.1.b (eeigenoes de protection en no qui concerne la compatibilité électromagnétique) - EN 301 489-1 v.1.8; (2008-04), EN 301 489-3 v.1.4; (2002-05), EN 301 489-7 v.1.3.1 (2005-11), EN 301 489-1 v.2.1; (2008-05), EN 301 489-2 v.1.1.1.5; (2010-10) Item 3.2 (effective use of spectrum so as to avoid harmful interferences) / Article 3.2 (utilization efficace du spectre radioélectrique de façon à éviter les interférences dommagnable - EN 301 511 v.9.0.2 (2003-03), EN 301 908-1 v.4.2.1 (2010-03), EN 301 908-2 v.4.2.1 (2010-03), EN 300 328 v.1.7.1 (2006-10), EN 300 440-1 v.1.6.1 (2010-08), EN 300 440-2 v.1.4.1(2010-08) This product also conforms to the applicable requirements of the directive 2004/108/EC (electrons). compatibility). / Ce produit est en conformité avec la directive 2004/108/EC (complatiblé électromagnétique)
- EN 55013-2001 +A2-2006 - EN 55020-2003 - This product can connect with a Common Mobile Phone Charger which complies with below standards (Ce produit peut être utilisé avec un chargeur universel pour téléphone portable conforme aux standards EN301 489-34 v 1 1 1 /2010-10 Conformity of this product has been reviewed by the following Notified body. / La conformité de ce produit a été vérifée par l'organisme de certification (notify body) suivent Suite C110, Whittier Avenue 6731, 22101 McLean, Virginia, United States TCT MODILLE SEST Identification number: 1588 Date :2012-04-10 Immeuble Le Capitola

Christophe Benoit

avenue des Champa Pierreux

RCS Namerie 449 018 222

TCT Mobile Europe SAS / Deputy General Manager, EMBaton Nankerre - FRANCE TCT Mobile Europe SAS - Siège social : 55 Avenue des Champs Pierreux, immeuble Le Capitole 92050 Nonterre SAS au capital de 23 031 072 euros - RCS Nanterre B 449 039 222 - Sinti 449 039 222 000 39 APE 46522

The tests are carried out in accordance with IEC standard PT62209-1.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

Product Handling

General Statement on handling and use

You alone are responsible for how you use your phone and any consequences of its use

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- · Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum -10 and maximum +50 degrees Celsius.
- Please check local regulations for disposal of electronic products.

Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Demagnetisation

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a prolonged time.

Electrostatic discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal use position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

tore the phone safely before driving your vehicle

Seizures/Blackouts

This phone is capable of producing bright flashing lights.

Repetitive Motion Injuries

To minimise the risk of RSI, when texting or playing games with your phone:

- · Do not grip the phone too tightly
- · Press the buttons lightly
- Make use of the special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text
- Take lots of breaks to stretch and relax

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises which may damage your hearing. Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Use the recommended headphones only.

Bright Light

This phone is capable of producing flashes of light, do not use it too close to the eyes.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle's electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel must service or repair the phone or its accessories. If your phone or its accessories have been submerged in water, punctured, or subjected to a severe fall, do not use them until you have taken it to be checked at an authorised service centre.

Battery Handling & Safety

Always switch the device off and disconnect the charger before removing the battery.

Only use the battery and charger supplied, or manufacturer approved replacements intended for use with your phone. Using other batteries and chargers could be dangerous.

Do not disassemble or short-circuit the battery. Accidental short-circuiting can occur if a metallic object such as a key, paper clip, or pen touches the terminals of the battery.

Improper battery use may result in a fire, explosion, or other hazard. If you believe the battery has been damaged, do not use it, take it to a service centre for testing.

Interference

General statement on interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interference noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna is included in the installation.

Explosive environments

Petrol stations and explosive atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Turn off your mobile phone or wireless device when in a blasting area or in areas posted with notifications requesting "two-way radios" or "electronic devices" are turned off to avoid interfering with blasting operations.

Your telephone is a transceiver that operates on GSM in quad-band (850/900/1800/1900MHz) or UMTS in dual-band (900/2100MHz).

C € 1588(I)

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: http://www.vodafone.com/smart2

This equipment may be operated in:				AT	BE
CY	CZ	DK	EE	FI	FR
DE	GR	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT
SK	SI	ES	SE	GB	IS
LI	NO	CH	BG	RO	TR

Protection against theft (1)

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recomment that you note the number the first time you use your telephone by entering *# 0.6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with adifferent SIM card

Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

Contact your network operator for service availability.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Licences



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

Vodafone Smart II Bluetooth QD ID B019112



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance. Your device uses non-harmonised frequency and is intended for use in all European countries.

The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

Google, the Google logo, Android, the Android logo, Google Search, Google Maps, Gmail, YouTube, Google Play Shop, Google latitude and Google Talk are trademarks of Google Inc.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Read the safety precautions and safety information carefully to ensure that you use this wireless device in a correct and safe manner.

TCT Mobile Limited Address:

TCT Mobile Europe SAS, 55 Av. des champs pierreux Le Capitole, Noyau B, 1er étage, 92000 Nanterre, France.

Website: http://www.vodafone.com/smart2

14 Telephone warranty

WARRANTY TERMS AND CONDITIONS

- Vodafone undertakes the warranty of this Mobile Phone for a period of two
 years from the date of Purchase by the original owner (not transferable) under normal use.
- 2. The Battery has a limited warranty for twelve (12) months, and Charger for twenty-four (24) months against manufacturing defects. Other accessories have a limited warranty for twenty-four (24) months against manufacturing defects.
- 3. This Warranty does not cover damage resulting from;
- a) Normal wear & tear of the equipment:
 - b) Defects and damages due to the equipment being used other than its normal and customary manner;
 - c) An unauthorized disassembly, repair, alteration or modification being carried out:
 - d) Misuse, abuse, negligence or accident howsoever caused;
- e) Defects or damage arising from improper testing, operation, maintenance, installation, or any alteration or modification;
- f) Defects or damage due to spillage of food or liquids, corrosion, rust or the use of wrong voltage;
- g) Scratches or damage to plastic surfaces and all other externally exposed parts that are due to normal customer use:
- 4. The Handset requiring service/repair must be delivered at the user's cost.
- 5. This warranty will be null and void in any of the following events:
 - a) If the serial number or warranty seal on the equipment has been defaced or removed.
 - b) If any term contained in this warranty has been altered or modified in any way without prior written consent of Vodafone.
- 6. The limited warranty extends only to customer who purchase the product in one of the countries (or areas) set forth at the end of this document. The limited warranty is only valid in Vodafone's intended country (or area) of sale of the Product.
- If the product is returned to Vodafone after the expiration of the warranty period, Vodafone's normal service policies shall apply and the Consumer will be charged accordingly.
 - a) Vodafone neither assumes for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.
 - All warranty information, product features and specifications are subject to change without notice.

8. THIS WARRANTY IS IN LIEU OF ANY AND OTHER WARRANTIES EXPRESSED OR IMPLIED, SPECIFICALLY INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. VODAFONE ASSUMES NO LIABILITY FOR THE BREACH OF THE WARRANTY BEYOND CORRECTING THE BREACH IN THE MANURER DESCRIBED ABOVE. IN NO EVENT SHALL VODAFONE BE LIABLE FOR CONSEQUENCES.

32 3:



Some services and apps may not be available in all countries. Please ask in-store for details.

Facebook is a trademark of Facebook, Inc.
The Twitter marks are trademarks of Twitter, Inc.
Google, Android, YouTube and other marks are
trademarks of Google Inc.

Shazam is a trademark of Shazam Entertainment Limited.

The Expedia Airplane logo is a trademark of Expedia, Inc.

© 2012 Vodafone Group. VODAFONE and the VODAFONE logos are trade marks of Vodafone Group. Other product names mentioned herein may be the trade marks of their respective owners.

English - CJB6050VDAAB